

## Air Cleaner

The air cleaner should be serviced at regular intervals (page 72). When riding in dusty areas, more frequent service may be necessary.

1. Remove the right side cover.
2. Remove the air cleaner cover screws (1) and the cover (2).
3. Remove the set plate (3) and air cleaner element (4).
4. Wash the element in non-flammable or high flash point solvent and let it dry thoroughly.

**WARNING:** Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.

5. Soak the element in clean gear oil (SEA 80 or 90) until saturated. Then squeeze it to remove the excess.
6. Install the air cleaner element, by reversing the removal procedure.

