

1. Pull back the rubber dust cover (2). Loosen the lock nut (3) and turn the clutch cable adjuster (4). Tighten the lock nut (3), and check adjustment.
2. If the adjuster is threaded out near its limit or the correct free play cannot be obtained using the cable adjuster (4), loosen the lock nut (3) and turn in the cable adjuster (4) completely. Tighten the lock nut (3) and pull on the rubber dust cover.
3. At the lower end of the cable, loosen the lock nut (5). Turn the adjusting nut (6) to obtain the specified free play. Tighten the lock nut (5), and check adjustment.

(A) Decrease free play

(B) Increase free play

