

### Drive chain adjustment:

To adjust the drive chain:

1. Loosen the rear axle nut (1).
2. Turn both right and left adjusters (2) equally to increase or decrease chain slack.
3. After adjusting to the specified chain slack, be sure the same adjuster index marks (3) align with the stopper pins (4) on both sides of the swingarm.

**NOTE:** If drive chain slack is excessive when the rear axle is moved to the furthest limit of adjustment, the drive chain is worn and must be replaced.

