

4. If the adjuster is threaded out near its limit or the correct free play cannot be obtained using the cable adjuster (4), loosen the lock nut (3) and turn in the cable adjuster (4) completely. Tighten the lock nut (3) and pull on the rubber dust cover.
5. At the lower end of the cable, loosen the lock nut (5). Turn the adjusting nut (6) to obtain the specified free play. Tighten the lock nut (5), and check adjustment.
6. If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.
 - (A) Decrease free play
 - (B) Increase free play

