

## Front Wheel Removal

1. Raise the wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable (1) from the front wheel hub assembly.
3. Disconnect the brake cable (3) from the brake arm (2).
4. Remove the axle nut (4) and pull out the front axle.
5. Remove the front wheel.

