

Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support under the engine.
2. Remove the rear brake adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3).
3. Loosen the rear axle nut (4).
4. Turn both adjusters so the rear wheel can be moved all the way forward for maximum drive chain slack.
5. Derail the drive chain from the driven sprocket.
6. Pull out the rear wheel axle (5) and then remove the rear wheel from the motorcycle.

