

Installation Notes:

- Reverse the removal procedure to install the wheel.
- Make sure the tank (6) on the swingarm is located in the slot (7) in the brake panel (8).
- Adjust the right and left chain adjusters so the same index mark on both sides align with the stopper pins on the swingarm.
- Adjust the brake (page 122) and drive chain (pages 112–114).
- Torque the axle nut to 80–100 N·m (8.0–10.0 kg-m, 58–72 ft-lbs).
- Apply the brake several times and check for free wheel rotation when released.

WARNING: If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

