

stall the high altitude main jet in accordance with the chart. Reinstall the float chamber.

6. Install the carburetor. Assure that the drain screw is turned fully clockwise. Turn the fuel valve ON.
7. Start the engine. Adjust the idle speed and pilot screw (2) (page 43).

NOTE:

- * Adjust the idle speed and pilot screw at high altitude to ensure proper high altitude operation.



(2) Pilot screw

Removal:

1. Follow installation steps 1-4.
2. Reinstall the original No. 95 main jet.
3. Reinstall the carburetor. Adjust the idle speed and pilot screw (2).

NOTE:

- * Adjust the idle speed at low altitude to ensure proper low altitude operation.