


THROTTLE CABLE

Inspect throttle cable condition and operation. Re-route the cable if it is improperly installed. Replace the cable if it has become worn or kinked. Lubricate the cable with a commercially available cable lubricant to prevent premature wear or corrosion. Free play, measured at the tip of the throttle lever (1), should be maintained at 5–10 mm (3/16–3/8 in). Minor adjustment can be made with the upper adjuster (2) on the throttle lever housing. Loosen the lock nut (3) and turn the adjuster.

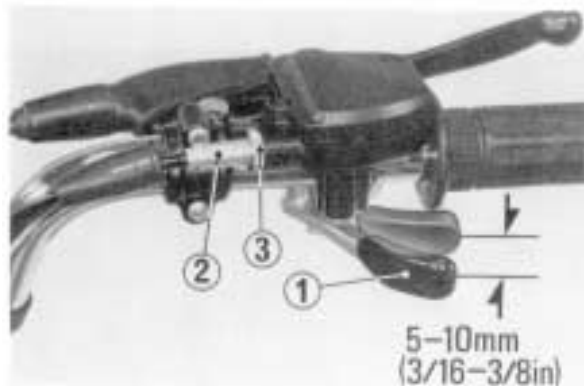

(1) Throttle lever (2) Upper adjuster (3) Lock nut

Major adjustment should be made using the lower adjuster (4). The lower adjuster is located on top of the carburetor, against the end of the throttle cable housing. Remove the seat and fuel tank. Slide the rubber sleeve up and adjust the cable. Re-install the sleeve, fuel tank and seat after adjustment.

NOTE:

* Note the band positions when removing them.



(4) Lower adjuster