

Spark knock	84
Spark plug	104
Specifications	137
Stalling on a hill	65, 67
Starter button	16
Storage compartment	29
Storing procedures	134

T

Throttle	
Cable	88
Lever	17, 88
Tires	
Inflation and air pressure	123
Repairing	126
Specifications	123
Tread condition	125
Tool kit	80
Transporting procedures	132
Turning	
On level ground	60
On slopes	73

V

Valve clearance	105
-----------------------	-----

W

Warning labels	7
Warranty service	139
Water	
Draining from brakes	121
Riding through	75
Weight limits	35
Wheel removal	122
Wiring diagram	138