

Fuse Replacement

The main fuse holder (2) is located in the terminal box (1) on the left side of the frame. The main fuse is 15A.


When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

WARNING

- * *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power at night.*

CAUTION:

- * *Turn the ignition switch OFF before checking or replacing the fuse to prevent accidental short-circuiting.*

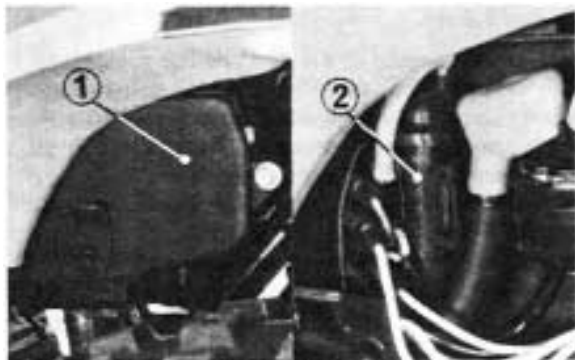

(1) Terminal box (2) Main fuse holder