
## Starting Procedure (after Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.

## Normal Air Temperature 10°-35°C (50°-95°F)

- 1. Raise the choke knob (1) to the Fully Closed position (A).
- 2. Turn the ignition switch (2) to ON.
- 3. Open the throttle slightly.
- 4. Press the starter button (3) and start the engine.
- \* Do not use the electric starter for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.

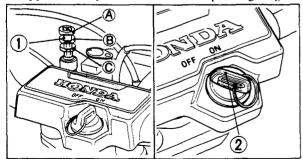

(1) Choke knob


(2) Ignition switch

- 5. Immediately after the engine starts, release the starter button and push the choke knob to the halfway position (B).
- 6. About a half minute after the engine starts, push the choke knob down all the way to Fully Open (C).
- 7. If idling is unstable, open the throttle slightly.

## High Air Temperature

35°C (95°F) or above

- 1. Do not use the choke.
- 2. Open the throttle slightly.
- 3. Start the engine by pressing the starter button.

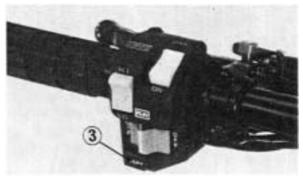

(3) Starter button