

## SPARK ARRESTER

The exhaust system must be periodically purged of accumulated carbon.

1. Remove the spark arrester bolts (1) and spark arrester lid (2).

### WARNING


*\* The exhaust system becomes VERY HOT even after short periods of engine operation.*

2. Start the engine and purge accumulated carbon from the system by momentarily revving up the engine several times.

### WARNING

- \* Do not perform this operation immediately after the engine has been run because the exhaust system becomes very hot.*
- \* Because of the increased fire hazard ensure that there are no combustible materials in the area when purging the spark arrester.*
- \* Wear eye protection.*
- \* Do not stand behind the vehicle while purging the carbon from the spark arrester.*
- \* Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death.*

3. Stop the engine and allow the exhaust pipe to cool.
4. Reinstall the spark arrester lid and bolts.

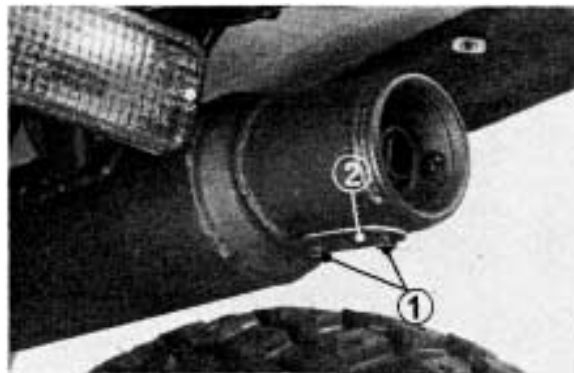

(1) Spark arrester bolts      (2) Spark arrester lid