

## **BRAKES**

### **Front Brakes**

This Sportrax has front hydraulic disc brakes.

As the brake pads wear, brake fluid level drops, automatically compensating for wear.

There are no adjustments to perform, but fluid level and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks.

#### **NOTE:**

If the brake lever travel become excessive and the brake pads are not worn beyond the recommended limit (page 109), there is probably air in the brake system and it must be bled. See your authorized Honda dealer for this service.

#### **CAUTION:**

- \* To prevent damage to the brake system, use only fluid from a sealed container. Never allow contaminants (dirt, water, etc.) to enter the brake fluid reservoir.**
- \* Brake fluid can damage paint and plastic, so handle the fluid with care. When adding brake fluid, be sure the reservoir is horizontal before removing the cover to prevent accidental spilling.**
- \* Use only DOT 4 brake fluid from a sealed container.**