

# Indicators

---


## Reverse and Neutral Indicator Lamps

The reverse indicator lamp ( 1 ) and the neutral indicator lamp ( 2 ) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is ON ( I ).

The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON ( I ).

If one of these indicators does not come on when it should, have your Honda dealer check for burned-out bulbs or other problems.

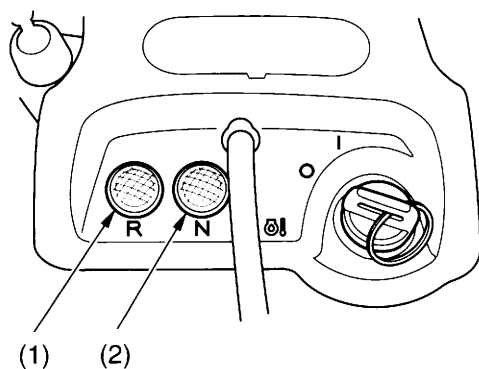

- (1) reverse indicator lamp
- (2) neutral indicator lamp