

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	km	100	600	1200	
			⇒		150	1000	2000	
			NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	*	FUEL LINE				I		—
	*	THROTTLE OPERATION				I		103
	*	CARBURETOR CHOKE				I		105
		AIR CLEANER	NOTE 1			C	C	98
		AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	102
		SPARK PLUG				I	I	109
	*	VALVE CLEARANCE			I	I	I	112
		ENGINE OIL			R	R	R	90
	**	ENGINE OIL STRAINER SCREEN					C	—
	**	ENGINE OIL CENTRIFUGAL FILTER					C	—
	*	ENGINE IDLE SPEED			I	I	I	108

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 182).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.