


Reverse Lock System

Reverse Lock System Adjustment

Refer to *Safety Precautions* on page 75 .


RIGHT SIDE

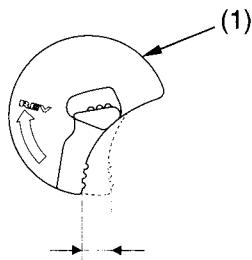

**15 – 21mm
(0.6 – 0.8 in)**

- (1) reverse assist lever
- (2) lock nut
- (3) adjusting nut

RIGHT SIDE

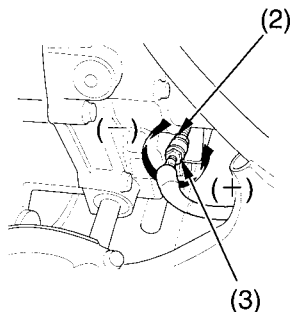

- (+) increase freeplay
- (-) decrease free play

1. Check the reverse assist lever (1) freeplay.
15 – 21 mm (0.6 – 0.8 in)
2. To adjust, loosen the lock nut (2) and turn the adjusting nut (3).
After adjustment, tighten the lock nut securely.

Other Inspection

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.