

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 180).

For information about carburetor adjustment for riding at high altitude, see page 181 .

Safe Riding Precautions	41
Off-Road Use Only	41
Keep Hands and Feet on Controls.....	42
Control Speed.....	43
Use Care on Unfamiliar or Rough Terrain.....	44
Do Not Perform Stunts.....	45
Starting & Stopping the Engine	46
Preparation	46
Starting Procedure	47
Flooded Engine	50
How to Stop the Engine	50
Shifting Gears	51
Riding in Reverse.....	53

(cont'd)