

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		FIRST	km	150	1000	2000	
		↔	mi	100	600	1200	
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(RE:EVERY 2 YEARS)		96
*	BRAKE FLUID	NOTE 3					120
*	BRAKE SHOE WEAR	NOTE 1					125
*	BRAKE PAD WEAR	NOTE 1,2					122
*	BRAKE LIGHT SWITCH						128
	BRAKE SYSTEM						119
*	REVERSE LOCK SYSTEM						110
	SKID PLATES, ENGINE GUARD						137
*	CLUTCH SYSTEM						106
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	117
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TYRES						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.