



# If You Have a Flat Tyre

## Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 75 .

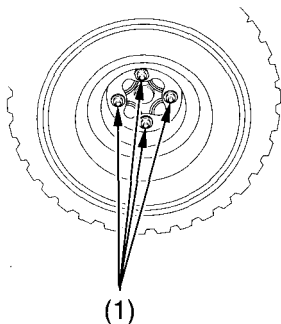

(1) wheel nuts

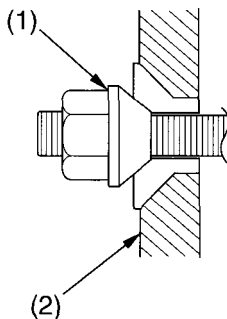

(2) wheel rim

### Removal

1. Park your ATV on a firm, level surface.
2. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
3. Remove the wheel nuts ( 1 ) with a 17 mm socket wrench.
4. Remove the wheel.

- Avoid getting grease, oil, or dirt on the front brake disc or pad surfaces when removing and installing each wheel. Any contamination can cause poor brake performance or rapid pad wear after reassembly.