


## Gear Position Indicator

The gear position indicator (1) shows the gear position when the ignition switch is in the ON (I) position and the engine is running.

The indicator shows: 1–5 for the five forward speed gears.

CENTER OF HANDLEBAR

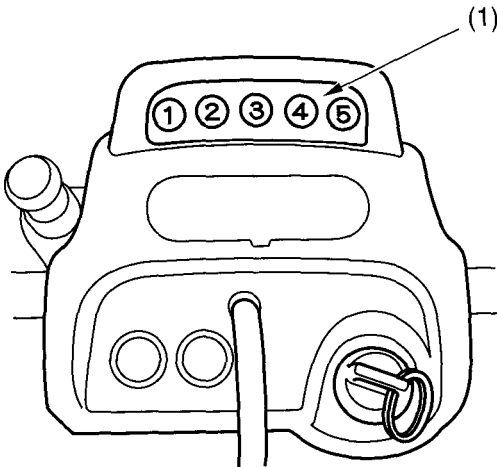

(1) gear position indicator