

# Indicators

---


## Reverse and Neutral Indicator Lamps

The reverse indicator lamp (1) and the neutral indicator lamp (2) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is ON ( I ).

The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON ( I ).

If one of these indicators does not come on when it should, have your Honda dealer check for burned-out bulbs or other problems.

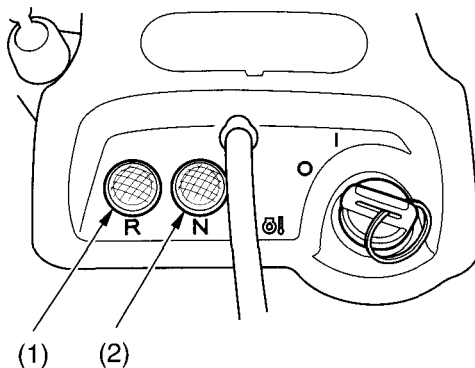

- (1) reverse indicator lamp
- (2) neutral indicator lamp