


# Seat Removal

---

Refer to *Safety Precautions* on page 79 .

The seat must be removed for the air cleaner, battery and fuse maintenance.

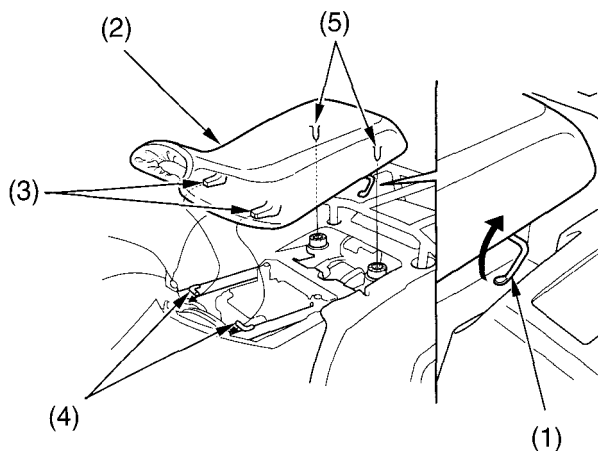

(1) seat lock lever

(4) hooks

(2) seat

(5) studs

(3) front prongs

## Removal

1. Pull the seat lock lever ( 1 ) at the left side of the seat.
2. Slide the seat ( 2 ) back and lift it.

## Installation

1. Insert the front prongs ( 3 ) into the hooks ( 4 ) on the frame and press the studs ( 5 ) into the grommets on the frame.
2. Press down on the seat until locks.