

# Controls & Features

## Front Brake Lever

The front brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 56.

## Rear Brake Lever


The rear brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 56.

## Rear Brake Pedal

The rear brake pedal is used to slow or stop your ATV. To operate, depress the pedal. For information on braking techniques, see page 56.

## Parking Brake

### LEFT HANDLEBAR

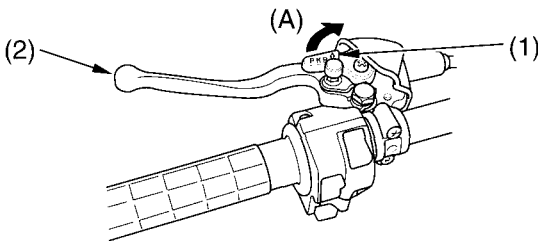

(1) lock lever

(A) to lock

(2) rear brake lever/parking lever

The lock lever ( 1 ) on the rear brake lever ( 2 ) allows it to be used as a parking brake. To operate, first squeeze the rear brake lever using your left hand and then lock it with the lock lever using your right hand. See *Parking* page 70 .