

To replace a fuse:

1. Make sure the ignition switch is ○ (OFF).

**CAUTION:**

Turn the ignition switch ○ (OFF) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.

2. Remove the seat (page 128).
3. Remove the fuse holder assembly (Fig.4-18).
4. Pull the old fuse out of the fuse holder.
5. Push the new fuse in to the fuse holder.
6. Install the fuse holder assembly and seat.

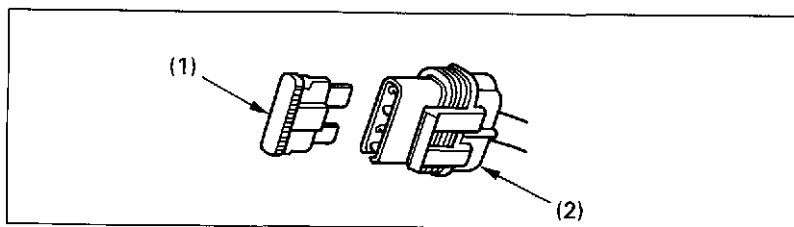


Fig. 4-19 (1) Fuse

(2) Fuse holder

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Improperly replacing a fuse.

### **WHAT CAN HAPPEN**

Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.

### **HOW TO AVOID THE HAZARD**

Never use a fuse with a different rating from that specified in this Owner's Manual.

Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.