

### **Reverse and Neutral Indicator Lamps**

The reverse indicator lamp (1) and the neutral indicator lamp (2) (Fig. 2-12) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is I (ON). The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is I (ON).

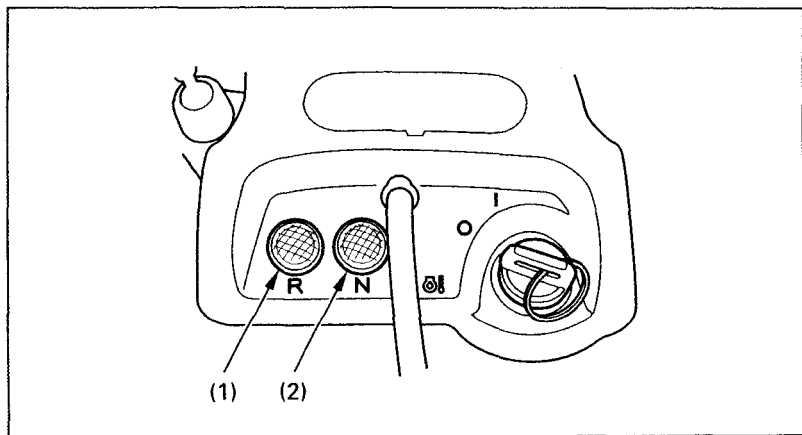


Fig. 2-12

(1) Reverse indicator lamp  
(2) Neutral indicator lamp