

### Starting Procedure (After Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.

The starter motor will operate only when the transmission is in neutral.

### Normal Air Temperature

10°–35 °C (50°–95 °F)

1. Pull the choke knob (1) up all the way to fully ON (A) position, if the engine is cold.
2. With the throttle slightly open, press the starter button.

### CAUTION:

**\* Pressing the electric starter button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the starter button for approximately 10 seconds before pressing it again.**

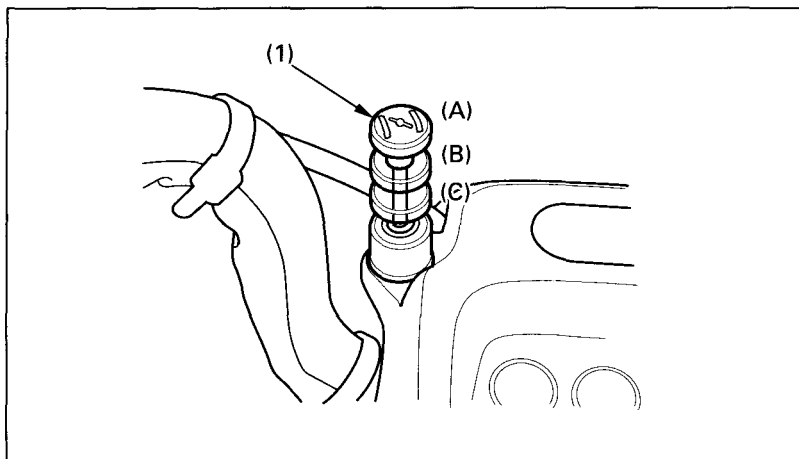


Fig. 3-9 (1) Choke knob

(A) Fully ON  
(B) Half way position  
(C) Fully OFF

3. Immediately after the engine starts, push the choke knob down to the halfway position (B).
4. Warm up the engine by opening and closing the throttle slightly.
5. After the engine has warmed up, push the choke knob down all the way to fully OFF. (C)
6. If idling is unstable, open the throttle slightly.