

	FREQUENCY ITEMS	Which ever comes first ↪	INITIAL		REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL			
			mi	100	600	1200	
			km	150	1000	2000	
NOTE	HOURS	20	100	200			
NON EMISSION RELATED ITEMS	REAR FINAL GEAR CASE OIL			(R: EVERY 2YEARS)		100	
	* BRAKE FLUID	(NOTE3)				112	
	* BRAKE SHOE WEAR	(NOTE2)				117	
	BRAKE SYSTEM					109 – 118	
	* REVERSE LOCK SYSTEM					104	
	SKID PLATES, ENGINE GUARD					125	
	* CLUTCH SYSTEM					103	
	* SUSPENSION					—	
	* SPARK ARRESTER			C	C	126	
	* NUTS, BOLTS, FASTENERS					—	
	** WHEELS/TIRES					119 – 123	
	** STEERING SHAFT HOLDER BEARINGS					—	
	** STEERING SYSTEM					—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently after riding in very wet or muddy conditions.
 2. Service more frequently when riding in dusty areas, sand or snow.
 3. Replace every 2 years. Replacement requires mechanical skill.