

Crossing slopes	74
Customer service	143

D

Decompressor lever	18
Dimmer switch	20
Dipstick	28, 99
Direct current (DC) power	
Receptacle	32
Special plug	32
Driveshaft boots	134

E

Engine	
Break-in procedures	II
Flooded engine	58
Engine guard and skid plates	131
Starting the engine	57
Engine oil	
Changing oil	101
Checking oil level and adding oil	99
Oil filler cap/dipstick	28
Oil filter	101
Oil temperature warning lamp	20
Recommendations	100
Engine stop switch	14
Exhaust system	
Cleaning	37
Purging	132

F

Final gear case oil	104
Flag pole bracket	30
Flooded engine	58
Fuel	
Fuel recommendations	86
Fuel strainer screen	88
Fuel tank cap	26, 84
Fuel tank cap vent lever	26
Fuel tank capacity	84
Fuel valve	26
High altitude fuel mixture adjustment	98