

Crossing slopes .....	74
Customer service .....	146

## D

Decompressor lever .....	18
Differential oil .....	106
Dimmer switch .....	20
Dipstick .....	28, 99
Direct current (DC) power	
Receptacle .....	32
Special plug .....	32
Driveshaft boots .....	136

## E

Engine	
Break-in procedures .....	II
Flooded engine .....	58
Starting the engine .....	57
Engine oil	
Changing oil .....	101
Checking oil level and adding oil .....	99
Oil filler cap/dipstick .....	28
Oil filter .....	101
Oil high temperature indicator lamp .....	20
Recommendations .....	100
Engine stop switch .....	14
Exhaust system	
Cleaning .....	37
Purging .....	134

## F

Final gear case oil .....	105
Flag pole bracket .....	30
Flooded engine .....	58
Front gear case oil .....	104
Fuel	
Fuel recommendations .....	86
Fuel strainer screen .....	88
Fuel tank cap .....	26, 84
Fuel tank cap vent lever .....	26
Fuel tank capacity .....	84
Fuel valve .....	26
High altitude fuel mixture adjustment .....	98