

Clutch adjustment.....	112
Consumer information	151
Crossing slopes.....	76
Customer service	152

D

Decompressor lever.....	18
Differential oil.....	108
Dimmer switch.....	20
Dipstick	28, 100
Direct current (DC) power	
Receptacle.....	32
Special plug	32
Driveshaft boots.....	138

E

Engine	
Idle speed adjustment.....	99
Break-in procedures	ii
Flooded engine.....	60
Starting the engine	57
Engine oil	
Changing oil.....	102
Checking oil level and adding oil.....	100
Oil filler cap/dipstick.....	28, 100
Oil filter	102
Oil high temperature indicator lamp.....	20
Recommendations	101
Engine stop switch.....	14
Exhaust system	
Cleaning.....	37
Purging.....	138

F

Final gear case oil	107
Flag pole bracket.....	30
Flooded engine	60
Fuel	
Fuel recommendations.....	88
Fuel strainer screen.....	90
Fuel fill cap.....	26, 86
Fuel tank cap vent lever	26