

L	
Loading	
Loading guidelines and procedures	40
Weight limits	39
Lubrication	
(see Engine oil, Gear case oil and differential oil)	

M

Maintenance	
Precautions	82
Schedule	81
Modifications	44

N

Neutral indicator lamp	22
------------------------------	----

O

Obstacles, riding over	78
Oil (see Engine oil, Gear case oil and differential oil)	
Oil filler cap/dipstick	28
Oil filter, changing	102
Owner's manual compartment	31

P

Parking	80
Parts location	10
Parking brake	25
Passenger carrying	46
Pavement, no riding on	48
Pinging	88
Power supply, 12V DC	32
Pre-ride inspection	36

R

Reverse	
Assist cable	113
Assist lever	113
Gear, shifting into	24, 61
Indicator lamp	22