

Clutch adjustment.....	116
Crossing slopes.....	80

D

Decompressor lever.....	20
Differential oil.....	112
Dimmer switch	24
Dipstick	32, 104
Direct current (DC) power	
Receptacle.....	36
Special plug	36
Driveshaft boots.....	142

E

Engine	
Idle speed adjustment.....	101
Break-in procedures	ii
Flooded engine	64
Starting the engine.....	61
Engine oil	
Changing oil.....	106
Checking oil level and adding oil.....	104
Oil filler cap/dipstick.....	32, 104
Oil filter	106
Oil high temperature indicator lamp.....	24
Recommendations	105
Engine stop switch	15
Exhaust system	
Cleaning	40
Purging.....	140

F

Final gear case oil	111
Flag pole bracket.....	34
Flooded engine	64
Fuel	
Fuel recommendations	92
Fuel strainer screen.....	94
Fuel fill cap	30, 90
Fuel tank cap vent lever	30
Fuel tank capacity	90
Fuel valve.....	31