

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Which ever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
NOTE	HOURS	20	100	200				
EMISSION RELATED ITEM	*	FUEL LINE				I	—	
	*	FUEL STRAINER SCREEN				C	90–91	
	*	THROTTLE OPERATION				I	92	
	*	CARBURETOR CHOKE				I	97	
		AIR CLEANER	(NOTE 1)			C	C	93–95
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	96
		SPARK PLUG				I	I	110–111
	*	VALVE CLEARANCE			I	I	I	111
		ENGINE OIL			R	R	R	28,100,101
		ENGINE OIL FILTER			R	R	R	102–104
	*	ENGINE IDLE SPEED			I	I	I	98

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate