

## ENGINE OIL

### Engine Oil Level Check

Check the engine oil level each day before operating the FOURTRAX.

The oil filler cap/dipstick (1) is on the right crankcase cover and contains a dipstick for measuring the oil level. The oil level must be maintained between the upper (2) and lower (3) level marks on the dipstick.

#### To check the oil level:


1. Place the vehicle on level ground.
2. Start the engine and let it idle for a few minutes.
3. Stop the engine. After a few minutes, remove the oil filler cap/dipstick and wipe it clean, then reinsert the dipstick without screwing it in.

The oil level should be between the upper (2) and lower (3) level marks on the dipstick.

4. If required, add the specified oil up to the upper level mark (2). Do not overfill.
5. Reinstall the oil filler cap/dipstick.

#### **CAUTION:**

\* *Running the engine with insufficient oil can cause serious engine damage.*

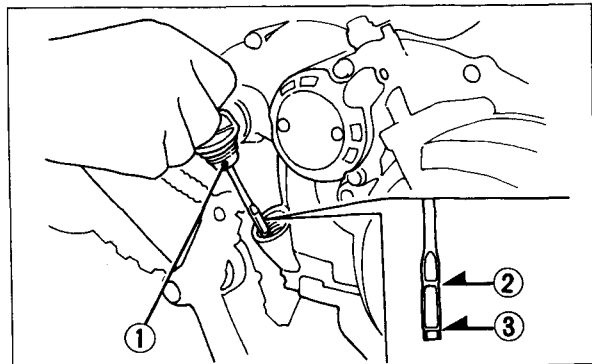

(1) Oil filler cap/dipstick (3) Lower level mark  
(2) Upper level mark