

Crossing slopes .....	78
-----------------------	----

## D

Decompressor lever .....	20
Dimmer switch .....	24
Dipstick .....	32, 102
Direct current (DC) power	
Receptacle .....	36
Special plug .....	36

## E

Engine	
Break-in procedures .....	ii
Flooded engine .....	62
Starting the engine .....	61
Engine oil	
Changing oil .....	104
Checking oil level and adding oil .....	102
Oil filler cap/dipstick .....	32
Oil filter .....	104
Oil temperature warning lamp .....	24
Recommendations .....	103
Engine stop switch .....	15
Exhaust system	
Cleaning .....	41
Purging .....	136

## F

Final drive oil .....	107
Flag pole bracket .....	34
Flooded engine .....	62
Fuel	
Fuel recommendations .....	90
Fuel strainer screen .....	92
Fuel tank cap .....	30, 88
Fuel tank cap vent lever .....	30
Fuel tank capacity .....	88
Fuel valve .....	30
High altitude fuel mixture adjustment .....	101
Refueling .....	88
Reserve fuel supply .....	31