

Spark arrester	136
Spark knock	90
Spark plug	108
Specifications	143
Speedometer [Australia model only]	22
Stalling on a hill	71, 73
Starter button	17
Starting primer knob	17
Storage compartment	35
Storing procedures	140
T	
Throttle	
Cable	94
Lever	21, 94
Tires	
Inflation and air pressure	129
Repairing	132
Specifications	129
Tread condition	131
Tool kit	86
Trailer hitch	34
Trailer towing	
Operational guidelines	44
Weight limits	43
Transporting procedures	138
Turning	
On level ground	66
On slopes	79
V	
Valve clearance	109
W	
Warning labels	7
Water	
Draining from brakes	127
Riding through	81
Weight limits	43
Wheel removal	128
Wiring diagram	145