

## Starter Button

The starter button (Fig. 2-8 ) is below the headlight switch (2). To start the engine, press the starter button (1), with the transmission in neutral, the ignition switch ON ( I ) and the engine stop switch (3) at RUN ( O ).

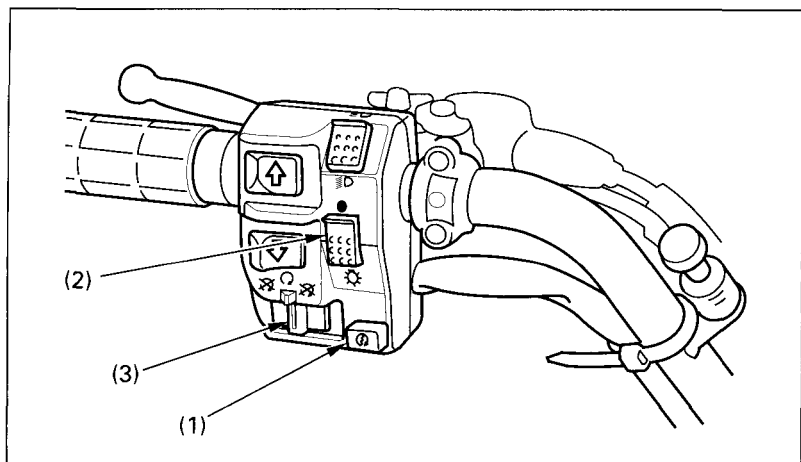


Fig. 2-8 (1) Starter button  
(2) Headlight switch

(3) Engine stop switch