

	FREQUENCY ITEMS	Whichever comes first ⇒	INITIAL		REGULAR		Refer to page	
			MAINTENANCE		MAINTENANCE INTERVAL			
			mi	100	600	1200		
			km	150	1000	2000		
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS						—	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)		117 – 119	
	* BRAKE FLUID	(NOTE3)					134	
	* BRAKE SHOE WEAR	(NOTE1)					139	
	BRAKE SYSTEM						131 – 140	
	* REVERSE LOCK SYSTEM						123	
	SKID PLATES,ENGINE GUARD						147	
	* CLUTCH SYSTEM						122	
	* SUSPENSION						—	
	* SPARK ARRESTER					C	C	148
	* NUTS, BOLTS, FASTENERS							—
	** WHEELS/TIRES							141 – 145
	** STEERING SHAFT HOLDER BEARINGS							—
** STEERING SYSTEM							—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.