

## Battery Removal

1. Make sure the ignition switch is OFF (  $\circ$  ).
2. Remove the seat (page 146).
3. To remove the rear fender lid (1), remove the clips (2) (Fig. 4-19 ).
4. Release the rings and remove the rubber band (4). (Fig.4-20)
5. Disconnect the negative ( - ) terminal lead (5) from the battery (3) first, then disconnect the positive ( + ) terminal lead (6).
6. Remove the battery.
  - \* Install in the reverse order of removal.
  - \* Check all bolts and other fasteners are secure.
  - \* After installing the battery, check to see if the battery cables are routed correctly.

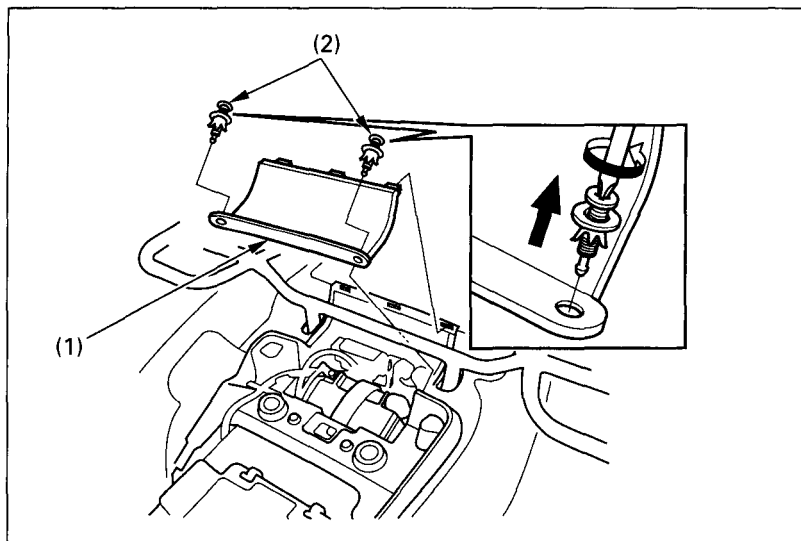


Fig.4-19

(1) Rear fender lid  
(2) Clips