

# Shifting Gears

---

## If the Shift Switches Do Not Function

If one or both shift switches do not function, see the following instructions. If proper function cannot be restored, see your Honda dealer.

When the engine is running:

1. Stop the ATV.
2. Turn the ignition switch to the “OFF” (  $\bigcirc$  ) position.
3. After the engine stops, turn the ignition switch to the “ON” (  $|$  ) position.
4. Press both shift switches and check that they are functioning.
5. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see *Emergency Gear Selection & Operation*, page 67 .

When the engine is stopped (ignition switch at “ON” (  $|$  )):

1. Turn the ignition switch to the “OFF” (  $\bigcirc$  ) position.
2. Turn the ignition switch to the “ON” (  $|$  ) position.
3. Press both shift switches and check that they are functioning.
4. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see *Emergency Gear Selection & Operation*, page 67 .

When the battery is dead:

- See *If the Battery is Dead*, page 69 .