

Indicators & Display

Lamp Check

The oil high temperature indicator comes on when you turn the ignition switch ON so you can check that it is working. The indicator remains on until after the engine is started.

This indicator is identified in the table on page 16 with the words: *Lamp Check*.

When applicable, the reverse and neutral indicators come on when you turn the ignition switch ON and remain on until you shift out of reverse or neutral.

If one of these indicators does not come on when it should, have your Honda dealer check for burned-out bulbs or other problems.

Display Check (Canada only)

When the ignition switch is turned ON (I), the multi-function display (4) will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.

The displays are identified in the table on page 16 with the words: *Display Check*.

If any part of these displays does not come on when it should, have your Honda dealer check for problems.