

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 192).

For information about carburetor adjustment for riding at high altitude, see page 189.

Safe Riding Precautions.....	51
Off-Road Use Only.....	51
Keeps Hands and Feet on Controls	52
Control Speed.....	53
Use Care on Unfamiliar or Rough Terrain.....	54
Do Not Perform Stunts.....	55
Starting & Stopping the Engine	56
Preparation	56
Starting Procedure.....	57
Flooded Engine	59
How to Stop the Engine	59
Using the Recoil Starter	60
Shifting Gears	61
Riding in Reverse.....	63

(cont'd)