

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean      R: Replace A: Adjust      L: Lubricate		EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
*	BRAKE SHOE WEAR	YEAR I (NOTE 3)			64, 65
	BRAKE SYSTEM		I	I	64-68
*	REVERSE LOCK SYSTEM		I	I	-
*	CLUTCH SYSTEM		I	I	69
	SKID PLATE, GUARD PLATE			I	70
*	SUSPENSION			I, L	-
*	SPARK ARRESTER	(NOTE 1)		C	71
*	NUT, BOLT, FASTENER		I	I	-
**	WHEEL		I	I	-
**	STEERING HEAD BEARINGS	YEAR I			-
**	STEERING SYSTEM	YEAR I			-

\* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER. UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

- NOTES:
1. USA only
  2. Service more frequently when riding in dusty areas, sand or snow.
  3. Service more frequently after riding in very wet or muddy conditions.