



5. Loosen the band screws (6) and remove the connecting bolt (8).
6. Loosen the band screws (9) and remove the air cleaner case (10).

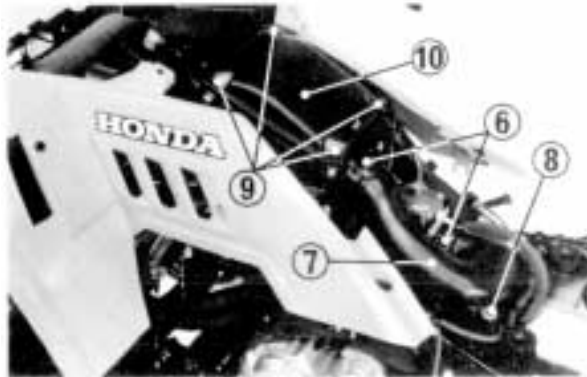

- | | |
|---------------------|-----------------------|
| (6) Band screws | (9) Band screws |
| (7) Connecting tube | (10) Air cleaner case |
| (8) Bolt | |

7. Remove the three engine mount bolts (11) and mount plates (12).
8. Remove the valve adjusting hole covers (13).

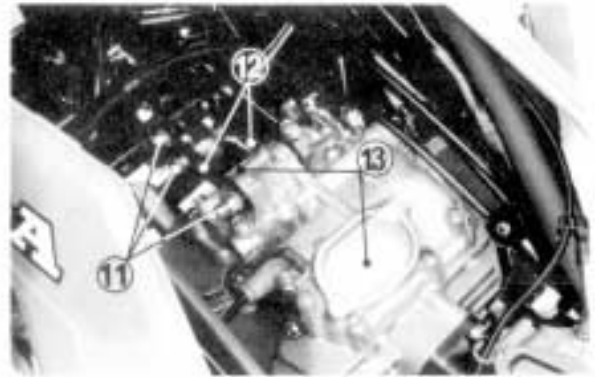

- | |
|----------------------------------|
| (11) Engine mount bolts |
| (12) Mount plates |
| (13) Valve adjusting hole covers |