

## TRANSPORTING

1. Turn the fuel tank cap lever and fuel valve OFF.
2. Place the carburetor drain tube in a suitable container.
3. Turn the drain screw counterclockwise to drain the gasoline from the carburetor.

### WARNING

- \* *Gasoline is flammable and is explosive under certain condition. Do not smoke or allow flames or sparks near the equipment while draining fuel.*
- \* *Never incline the machine with the front wheels up without draining the fuel and removing the battery. Fuel vapor or spilled fuel may ignite and the battery may leak electrolyte.*

4. After draining turn the drain screw clockwise until tight.

### NOTE:

- \* Be sure the fuel drain is closed (screw turned clockwise) before refueling the TRX.
  - \* It is not necessary to drain the engine oil from the crankcase, as no appreciable oil leakage will occur when the TRX is inclined with the front wheels up.
5. Remove the battery, disconnecting the negative (-) terminal first, then the positive (+) terminal. When reinstalling the battery, connect the positive (+) terminal first, then the negative (-).
  6. If wheel removal is required when transporting, follow the procedures on the following pages.
  7. Always check tire pressures just before riding.