

Indicators & Displays

| | | |
|---|---------------------------------------|---|
| 1 | Reverse indicator | Lights when the transmission is in reverse. <i>Lamp Check</i> |
| 2 | Neutral indicator | Lights when the transmission is in neutral. <i>Lamp Check</i> |
| 3 | Oil high temperature indicator | Lights when engine oil temperature is high enough to adversely affect the service life of the engine. If the oil high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 181. <i>Lamp Check</i> . |
| 4 | Multi-function display | The display includes the following functions. <i>Display Check</i> . |
| | Gear position indicator | Shows the gear position. (page 18) |
| | Speedometer | Shows riding speed. |
| | Odometer | Shows accumulated mileage (page 19). |
| | Tripmeter | Shows mileage per trip (page 19). |
| | Hourmeter | Shows hours and tenths of hours of engine operation (page 20). |
| | Digital clock | Shows the time (hours and minutes) (page 21). |
| 5 | Minute select button | Advances the minutes displayed by the digital clock (page 21). |
| 6 | Hour select button | Advances the hour displayed by the digital clock (page 21). |
| 7 | Hourmeter/digital clock select button | Selects display of the hourmeter or digital clock (pages 20 , 21). |
| 8 | Odometer/tripmeter select button | Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 19). |