

# Controls & Features

---

## **Front Brake Lever**

The front brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 70 .

## **Rear Brake Lever**

The rear brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 70 .

## **Rear Brake Pedal**

The rear brake pedal is used to slow or stop your ATV. To operate, depress the pedal. For information on braking techniques, see page 70 .