

Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 89 .


Check the engine oil level each day before operating your ATV and add oil if needed.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. Stop the engine and wait 2 – 3 minutes.
3. Remove the dipstick (1) from the front crankcase cover and wipe it clean.
4. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level. The oil level should be between the upper level mark (2) and the lower level mark (3) on the dipstick.
5. If required, remove the oil filler cap (4) from the left side of the crankcase and add the specified oil into the filler cap hole, up to the upper level mark on the dipstick. Do not overfill.
6. Reinstall the oil filler cap and dipstick.

NOTICE


Running the engine with an improper oil level can cause serious engine damage.

RIGHT SIDE

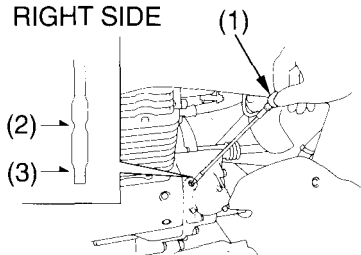

- (1) dipstick
- (2) upper level mark

LEFT SIDE

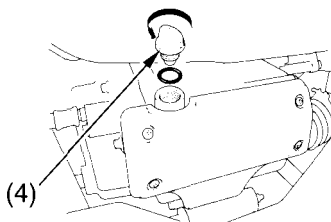

- (3) lower level mark
- (4) oil filler cap