

# Tyres

---

Always check air pressure when your tyres are “cold.” If you check air pressure when your tyres are “warm” — even if your ATV has only been ridden for a few miles — the readings will be higher. If you let air out of warm tyres to match the recommended cold tyre pressures, the tyres will be underinflated. Be sure to check tyre pressure at the riding site, since changes in altitude can affect air pressure.

The recommended “cold” tyre pressures are:

		FRONT	REAR
NO CARGO	RECOMMENDED PRESSURE	20 kPa (0.20 kgf/cm <sup>2</sup> , 2.8 psi)	20 kPa (0.20 kgf/cm <sup>2</sup> , 2.8 psi)
	MAXIMUM PRESSURE	23 kPa (0.23 kgf/cm <sup>2</sup> , 3.3 psi)	23 kPa (0.23 kgf/cm <sup>2</sup> , 3.3 psi)
	MINIMUM PRESSURE	17 kPa (0.17 kgf/cm <sup>2</sup> , 2.5 psi)	17 kPa (0.17 kgf/cm <sup>2</sup> , 2.5 psi)
WITH CARGO	RECOMMENDED PRESSURE	20 kPa (0.20 kgf/cm <sup>2</sup> , 2.9 psi)	20 kPa (0.20 kgf/cm <sup>2</sup> , 2.9 psi)